

TIMCO DUAL 2X18V PENSASLEIKKURI RUNKO

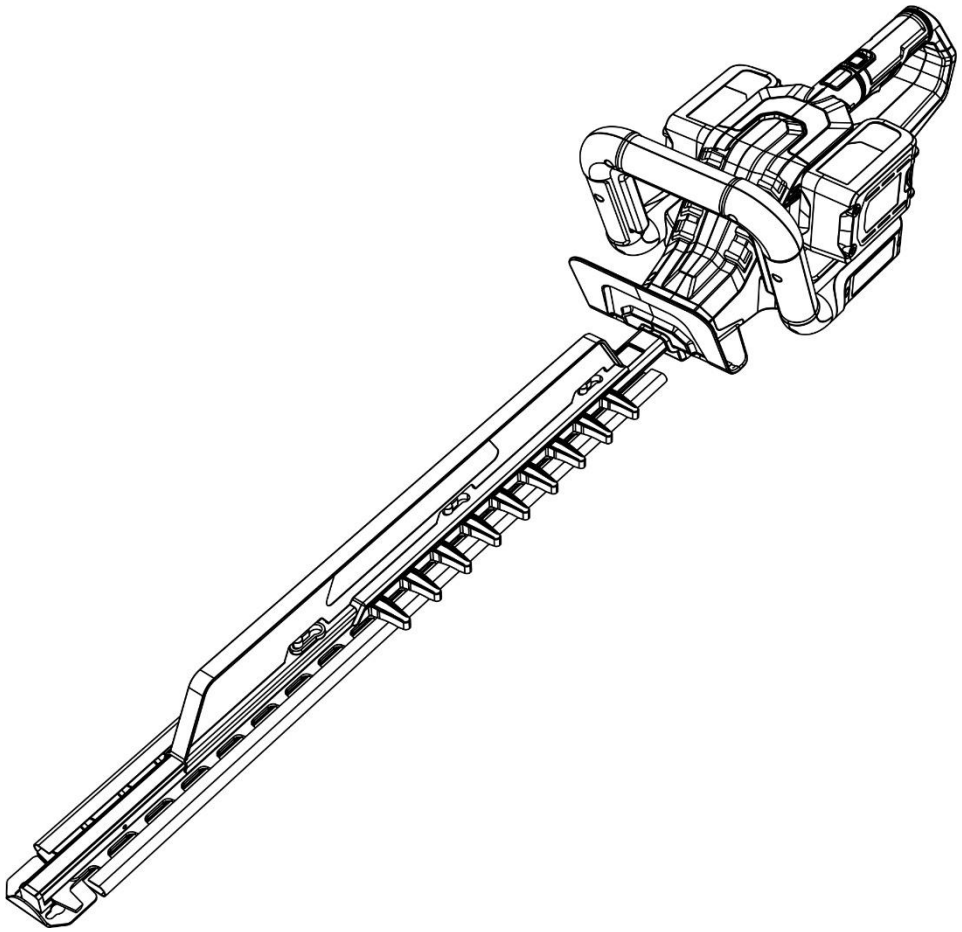


EAN: 6438014399140

Alkuperäisten ohjeiden käännös

1

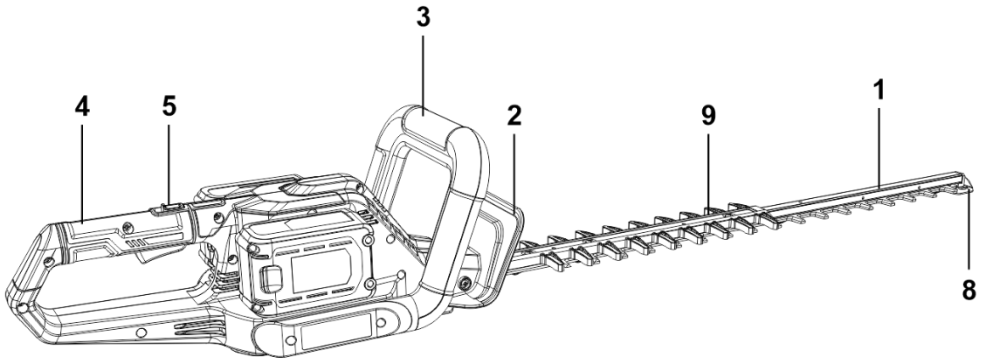


2

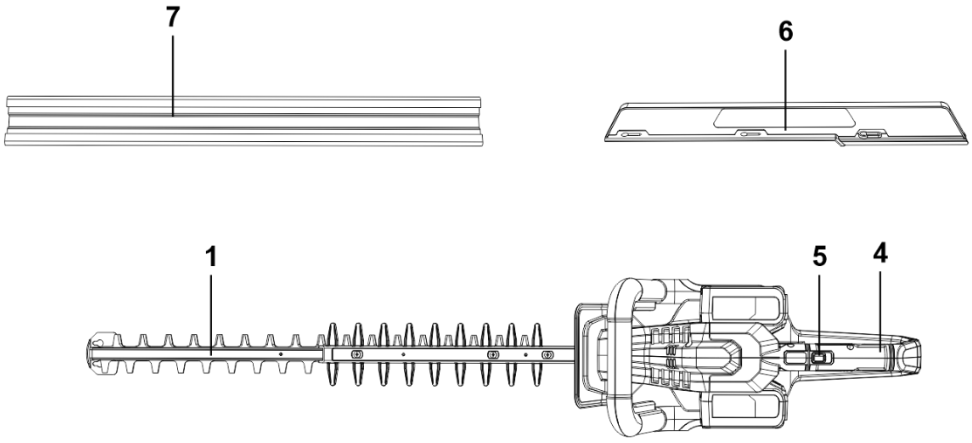


3




4a

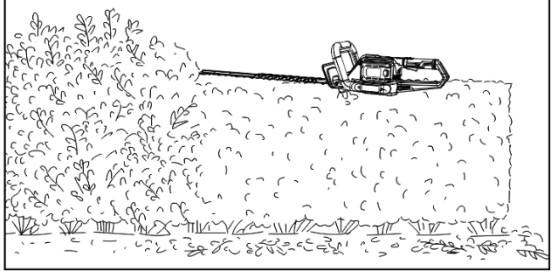


4b

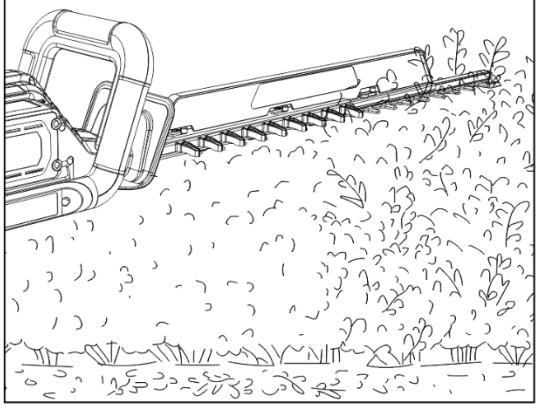


4c

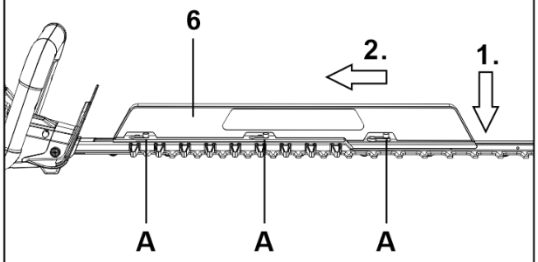


5

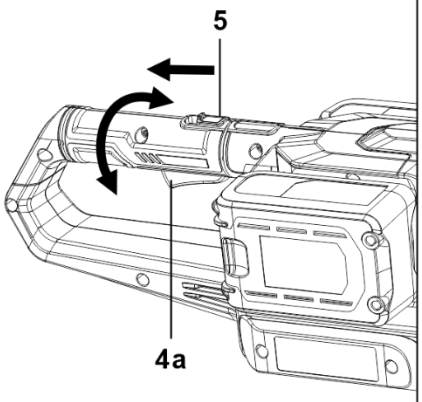


6

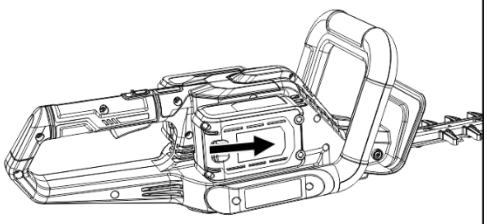


7

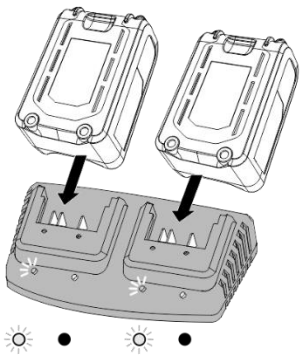


8

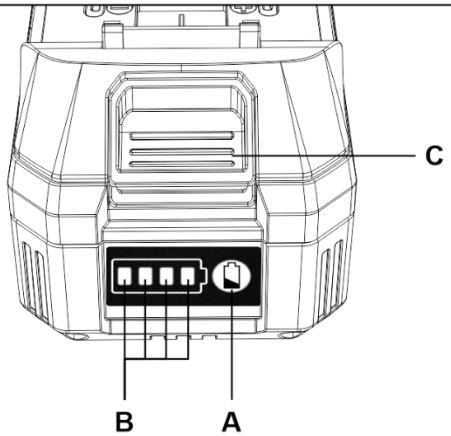


9

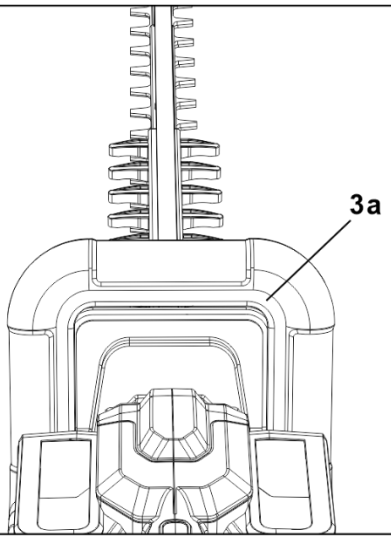


10

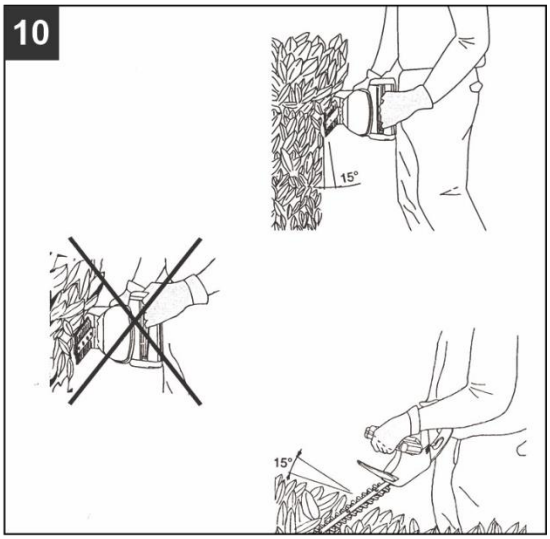


11

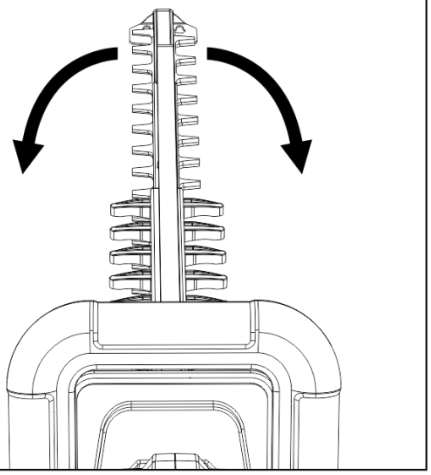


12

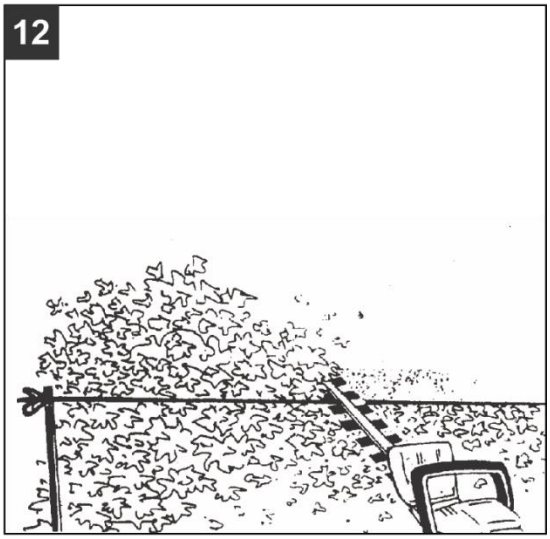


13

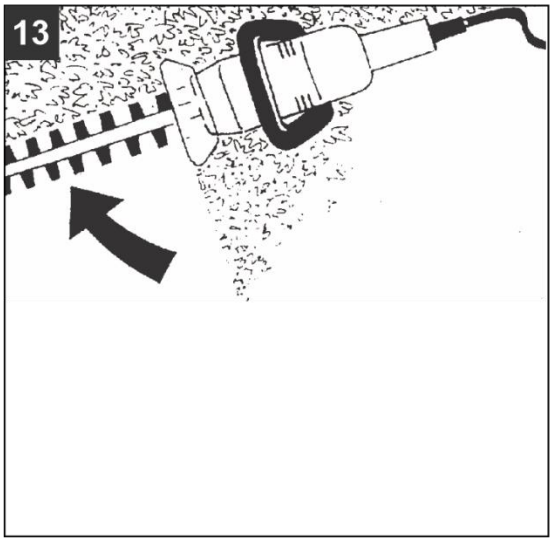

14

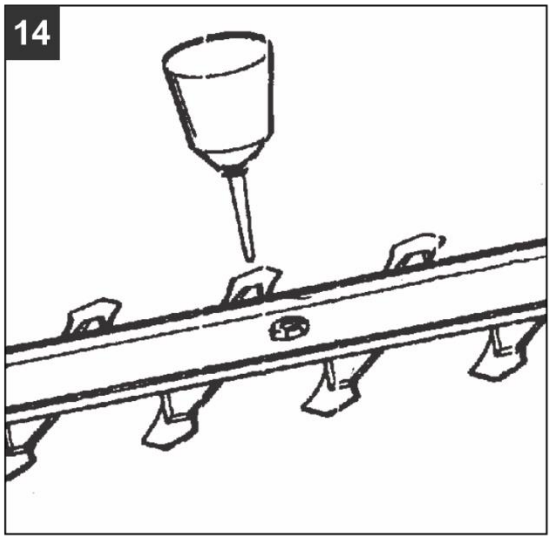


15

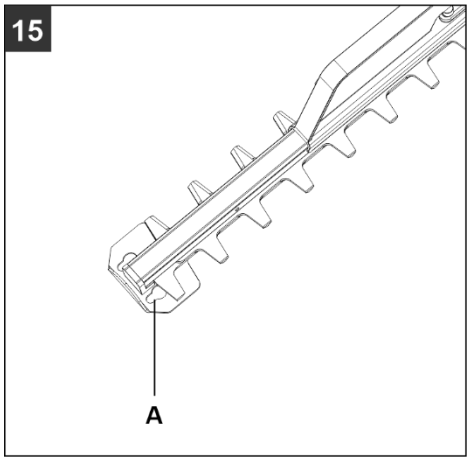





Vaara! - Lue käyttöohjeet loukkaantumisvaaran vähentämiseksi

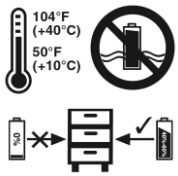

Säilytä akkuja vain kuivissa tiloissa, joiden ympäristön lämpötila on +10 °C - +40 °C. Säilytä vain täyteen ladattuja akkuja (varattu vähintään 40 %).

Lapset eivät saa käyttää tätä laitetta. Lapsia tulee valvoa, jotta he eivät leiki laitteilla. Lapset eivät saa suorittaa puhdistusta tai huoltoa. Tätä laitetta eivät saa käyttää henkilöt, joilla on rajoitettu fyysinen, sensorinen tai henkinen toimintakyky tai henkilöt, joilla ei ole riittävästi tietoa tai kokemusta, elleivät he ole niistä vastuussa olevan henkilön valvonnassa ja vastuulla.

Vaara!
Laitetta käytettäessä on noudatettava turvaohjeita loukkaantumisten ja vahinkojen välttämiseksi. Lue käyttöohjeet ja turvallisuusmääräykset huolellisesti. Säilytä tämä käsikirja turvallisessa paikassa, jotta tiedot ovat aina saatavilla. Jos annat laitteen toiselle henkilölle, luovuta myös nämä käyttöohjeet ja turvallisuusmääräykset. Valmistaja tai myyjä ei ota vastuuta vahingoista tai onnettomuuksista, jotka johtuvat näiden ohjeiden ja turvallisuusohjeiden noudattamatta jättämisestä.

Selitys käytetyistä symboleista (katso kuva 3)
1. Varoitus
2. Suojaa kosteudelta.
3. Lue käyttöohje ennen aloittamista.
4. Käytä suojalaseja ja korvatulppia.

1. Safety information

Vaara!
Lue kaikki turvallisuusmääräykset ja -ohjeet.
VAROITUS: Sähköisiä puutarhanhoitolaitteita käytettäessä tulee aina noudattaa perusturvallisuusohjeita tulipalon, sähköiskun ja henkilövahinkojen vähentämiseksi, mukaan lukien seuraavat:

FOR ALL APPLIANCES
• Vältä vaarallisia ympäristöjä – älä käytä laitteita kosteissa tai märissä tiloissa.
• Älä käytä sateessa.
• Pidä lapset loitolla – kaikki ihmiset ja lemmikkieläimet tulee pitää etäällä työalueelta.
• Pukeudu kunnolla – älä käytä väljiä vaatteita tai koruja. Ne voivat tarttua liikkuviin osiin. Käytä suojavaatetusta; Ulkona työskennellessä suositellaan työkäsineiden, pitkien housujen, pitkähihaisen paidan ja turvajalkineiden käyttöä. Kiinnitä ja suojaa pitkät hiukset.
• Käytä suojalaseja – käytä aina kasvo- tai pölymaskia, jos työskentelyalue on pölyinen. Turvallisuussääntöjen tarkoituksena on kiinnittää huomiosi mahdollisiin vaaroihin. Turvasymbolit ja niiden selitykset vaativat huolellista huomiota ja ymmärtämistä. Turvallisuusvaroitukset eivät itsestään

poista kaikkia vaaroja. Niiden antamat ohjeet tai varoitukset eivät korvaa asianmukaisia onnettomuuksien ehkäisytoimenpiteitä.
• Käytä oikeaa laitetta - älä käytä laitetta muihin töihin kuin siihen, johon se on tarkoitettu.
• Älä pakota laitetta väkisin - se tekee työnsä paremmin ja pienemmällä loukkaantumisvaaralla sillä nopeudella, jota varten se on suunniteltu.
• Älä kurota liikaa – pidä koko ajan oikeanlainen jalansija ja tasapaino.
• Pysy valppaana. Käytä maalaisjärkeä. Älä käytä laitetta väsyneenä tai huumeiden, alkoholin tai päihdyttävien lääkkeiden vaikutuksen alaisena
• Kun laitetta ei käytetä, se tulee säilyttää sisätiloissa kuivassa paikassa lasten ulottumattomissa.
• Huolla laitetta huolellisesti. Noudata voitelu- ja vaihto-ohjeita tarvikkeet. Pidä kahvat kuivina, puhtaina ja puhtaina öljystä ja rasvasta.
• Tarkista vaurioituneet osat. Ennen kuin käytät laitetta, varmista, että turvasuojukset ovat ehjät. Älä koskaan käytä työkalua ilman sen turvasuojusta. Tarkista liikkuvien osien kohdistus, liikkuvien osien kiinnitys.
• Tarkista, onko rikkinäisiä tai viallisia osia, jotka voivat vaikuttaa työkalun turvalliseen käyttöön. Valtuutetun huoltoliikkeen on korjattava tai vaihdettava suojus tai muu osa, joka on vaurioitunut, ellei toisin mainita tässä oppaassa.
• Lataa vain valmistajan määrittelemällä laturilla. Yhden tyyppiselle akulle sopiva laturi voi aiheuttaa tulipalon vaaran, kun sitä käytetään toisen akun kanssa.
• Käytä vain laitteita, joissa on erityisesti nimetty akku. Mitkä tahansa muut akut voivat aiheuttaa loukkaantumis- ja tulipalon vaaran.
• Kun akkua ei käytetä, pidä se loitolla muista metalliesineistä, kuten paperiliittimistä, kolikoista, avaimista, nauloista, ruuveista tai muista pienistä metalliesineistä, jotka voivat muodostaa yhteyden liittimestä toiseen. Akun napojen oikosulku voi aiheuttaa palovammoja tai tulipalon.
• Väärinkäytöksissä akusta saattaa vuotaa nestettä. vältä kontaktia. Jos kosketus tapahtuu vahingossa, huuhtele vedellä. Jos nestettä joutuu silmiin, hakeudu lisäksi lääkärin hoitoon. Akusta roiskuva neste voi aiheuttaa ärsytystä tai palovammoja. (Tämän neuvon katsotaan olevan oikea perinteisille NiMh-, NiCd-, lyijyhappo- ja litiumionikennotyypeille. Jos tämä neuvo on väärä kennosuunnittelussa, joka poikkeaa näistä, oikea neuvo voidaan korvata.)
• Älä käytä akkua tai laitetta, joka on vaurioitunut tai muutettu. Vaurioituneet tai muunnetut akut voivat käyttäytyä arvaamattomalla tavalla, mikä voi aiheuttaa tulipalon, räjähdyksen tai loukkaantumisvaaran.
• Noudata kaikkia latausohjeita äläkä lataa akkua tai laitetta ohjeissa määritellyn lämpötila-alueen ulkopuolella. Virheellinen lataaminen tai määritellyn alueen ulkopuolella olevissa lämpötiloissa voi vahingoittaa akkua ja lisätä tulipalon vaaraa.
• Anna pätevän korjaamon suorittaa huolto käyttämällä vain identtisiä varaosia. Näin varmistetaan, että tuotteen turvallisuus säilyy.
• Älä muuta tai yritä korjata laitetta laitetta tai akkuja paitsi käyttö- ja hoito-ohjeissa kuvatulla tavalla.

1.) KAIKKIIN AKULLA VARUSTETUT PUUTARHAKONEET• Älä lataa laitetta sateessa tai märissä tiloissa.
• Älä käytä paristokäyttöisiä laitteita sateessa. Irrota tai irrota akku aina ennen puutarhakoneiden säätöä, puhdistusta, huoltoa tai kuljettamista.

• Käytä vain koneeseen tarkoitettuja akkuja.
• Älä heitä akkua tuleen. Kenno voi räjähtää. Tarkista mahdolliset erityiset hävitysohjeet paikallisista koodeista.
• Älä avaa tai vahingoita akkua. Vapautunut elektrolyytti on syövyttävää ja voi vahingoittaa silmiä tai ihoa. Se voi olla myrkyllistä nieltynä.
• Käsittele akkua varovasti, jotta se ei oikosulje johtavien materiaalien, kuten sormusten, rannekorujen ja avainten, kanssa. Akku tai johdin voi ylikuumentua ja aiheuttaa palovammoja.

3.) VÄLTÄ TAHATONTA KÄYNNISTÄMISTÄ – ÄLÄ KYTKE AKKUA, KUN SORMESI ON KYTKIMEN PÄÄLLÄ. VARMISTA, ETTÄ KYTKIN ON KOKONAAN POIS PÄÄLTÄ KUN KYTKET AKUN.

AKKUA KOSKEVAT YLEISET TURVALLISUUSVAROITUKSET
• Hävitä käytetty akku välittömästi ja asianmukaisesti. Kun hävität toissijaisia kennoja tai akkuja, pidä eri järjestelmien kennot tai akut erillään toisistaan.
• Pidä akku poissa lasten ulottuvilta ja alkuperäispakkauksessa, kunnes olet valmis käyttämään sitä.
• Älä koskaan laita paristoja suuhusi. Jos ainetta on nielty, ota välittömästi yhteyttä paikalliseen myrkytystietokeskukseen.
• VAROITUS – Tässä laitteessa käytetyt akku voivat aiheuttaa tulipalon tai kemiallisen palovamman vaaran, jos sitä käsitellään väärin. Muun kuin alkuperäisen akun käyttö voi aiheuttaa tulipalon tai räjähdysvaaran.
• VAROITUS: Älä käytä näkyvästi vaurioitunutta akkua tai laitetta.
• VAROITUS: Älä muuta tai yritä korjata laitetta tai akkua.
• PARISTOT ON KIERRÄTETTÄVÄ.
• Älä oikosulje kennoa tai akkua. Älä säilytä kennoja tai akkuja satunnaisesti laatikossa tai laatikossa, jossa ne voivat aiheuttaa oikosulkuja toisiinsa tai johtavien materiaalien aiheuttaman oikosulun. • Älä altista kennoja tai akkuja
mekaanisia iskuja.
• Pidä kennot ja akut puhtaina ja kuivina. Pyyhi pariston tai akun navat puhtaalla kuivalla liinalla, jos ne likaantuvat.
• Älä pidä toisiokennoja ja akkuja ladattuna, kun niitä ei käytetä.
• Säilytä alkuperäinen kenno ja akku. Älä käytä muuta laturia kuin sitä, joka on erityisesti tarkoitettu käytettäväksi laitteen kanssa. Toissijaiset kennot ja akut on ladattava ennen käyttöä. Käytä aina oikeaa laturia ja katso oikeat latausohjeet valmistajan ohjeista tai laiteoppaasta.
• Jos mahdollista, poista akku laitteesta, kun sitä ei käytetä.
• Estä tahaton käynnistyminen. Varmista, että kytkin on off-asennossa, ennen kuin liität laitteen akkuun, nostat tai kannat laitetta. Laitteen kantaminen sormi kytkimen päällä tai virran kytkeminen päälle laitteissa, joissa on virtakytkin, aiheuttaa onnettomuuksia.
• Irrota akku laitteesta ennen kuin teet mitään säätöjä, vaihdat lisävarusteita tai

laitat säilytykseen. Tällaiset ennaltaehkäisevät turvatoimenpiteet vähentävät laitteen vahingossa käynnistymisen riskiä.
• Väärinkäytöksissä akusta saattaa vuotaa nestettä. vältä kontaktia. Jos kosketus tapahtuu vahingossa, huuhtele vedellä. Jos nestettä joutuu silmiin, hakeudu lisäksi lääkärin hoitoon. Akusta roiskuva neste voi aiheuttaa ärsytystä tai palovammoja.
• Anna pätevän korjaamon suorittaa huolto käyttämällä vain identtisiä varaosia. Näin varmistetaan, että tuotteen turvallisuus säilyy.

TÄRKEITÄ TURVALLISUUSOHJEITA LATURILLE
VAROITUS: Tämä tuote saattaa sisältää lyijyä, ftalaattia tai muita kemikaaleja, joiden Kalifornian osavaltio tietää aiheuttavan syöpää, synnynnäisiä epämuodostumia ja muita lisääntymisvaurioita. Pese kätesi käytön jälkeen.

• Tarkasta laite aina silmämääräisesti ennen käyttöä. Älä käytä laitetta, jos turvalaitteet ovat vaurioituneet tai kuluneet. Älä koskaan poista mitään turvalaitteita käytöstä.
• Lopeta laitteen käyttö, jos lähellä on ihmisiä – erityisesti lapsia – tai lemmikkejä.
• Olet vastuussa käyttöalueen turvallisuudesta.
• Varmista, että seisot suorassa työskentelyn aikana.
• Älä koskaan jätä laitetta ilman valvontaa työalueelle. Jos keskeytät työskentelyn hetkeksi, jätä laite turvalliseen paikkaan.
• Jos keskeytät työsi mennäksesi toiselle alueelle töihin, sinun on varmistettava, että laitteet on sammutettu, kun menet sinne.
• Älä koskaan käytä laitetta sateella tai kosteassa tai märässä ympäristössä. • Suojaa laitteesi kosteudelta ja sateelta.
• Kun työskentelet lannoitteiden ja pölyisten tuotteiden kanssa, käytä sopivia silmä- ja hengityssuojaimia. Suojaa ihosi ja silmäsi pölyltä.
• Älä käytä laitetta nesteiden, jauheiden, torjunta-aineiden, rikkakasvien torjunta-aineiden tai kemikaalien levittämiseen, jotka on tarkoitettu tavanomaiseen, kaupalliseen tai teolliseen käyttöön.
• Kun laite on käytössä, pidä se aina kaukana ja poispäin kehostasi!
• Älä käynnistä laitetta, kun se on käännetty ympäri tai kun se ei ole työasennossa.
• Älä koskaan suuntaa laitetta suoraan itseäsi tai muita ihmisiä kohti.
• Kun et käytä laitetta, säilytä se kuivassa paikassa poissa lasten ulottuvilta.
• Varmista, että ON/OFF-kytkintä ei ole aktivoitu ennen kuin poistat tukoksia, puhdistat laitteita, suoritat huoltotoimenpiteitä tai asetat laitteen varastoon.
• Älä koskaan poista tukoksia sormillasi - käytä tikkua tai vastaavaa työkalua.
• Varo koskettamasta laitteen liikkuvia osia.

Säilytä kaikki turvallisuusmääräykset ja ohjeet turvallisessa paikassa tulevaa käyttöä varten.

2. Osat ja lisävarusteet

2.1 Osat kuva 1 ja 2

1. Leikkurikisko
2. Käsisuoja
3. Kädensija
4. Kahva on/off-kytkimellä
5. Turvalukko kahvalle
6. kerääjä
7. Leikkurin suojus
8. Iskusuoja
9. Leikkuuterän suojakansi

2.2 Lisävarusteet

Tarkista, että tuote on täydellinen toimituspaketin mukaisesti. Jos osia puuttuu, ota yhteyttä huoltokeskukseemme tai myyntipisteeseen, josta teit ostoksen, viimeistään 5 arkipäivän kuluessa tuotteen ostamisesta ja esittämällä voimassa oleva ostolasku. Katso myös käyttöohjeen lopussa olevien huoltotietojen takuutaulukko. • Avaa pakkaus ja poista laite varovasti.

• Poista pakkausmateriaali ja kaikki pakkaus- ja/tai kuljetustuet (jos saatavilla).

• Tarkista, että kaikki osat on toimitettu.

• Tarkista laitteet ja varusteet kuljetusvaurioiden varalta.

• Jos mahdollista, säilytä pakkaus takuuajan loppuun asti.

Vaara!

Laitteet ja pakkausmateriaalit eivät ole leluja. Älä anna lasten leikkiä muovipussilla, kalvoilla tai pienillä osilla. On olemassa nielemis- tai tukehtumisvaara!

• Pensasleikkuri
• Leikkurin suojus
• kerääjä
• käyttöohje

3. Käyttö

Tämä pensasleikkuri soveltuu pensaiden, pensaiden ja pensaiden leikkaamiseen.

Laitetta saa käyttää vain sille määrättyyn tarkoitukseen. Kaikki muu käyttö katsotaan väärinkäytöksi. Käyttäjä/käyttäjä, ei valmistaja, ovat vastuussa kaikista tämän seurauksena aiheutuneista vahingoista tai vammoista.

Huomaa, että laitteitamme ei ole suunniteltu käytettäväksi kaupallisissa, kaupallisissa tai teollisissa sovelluksissa. Takuumme raukeaa, jos konetta käytetään kaupallisessa, kaupallisessa tai teollisessa käytössä yrityksille tai vastaaviin tarkoituksiin.

4. Tekniset tiedot

Nimellisjännite .....36 V d.c.
Leikkurikiskon pituus ..... 720 mm
Leikkauspituus ..... 650 mm
Hammasväli ..... 30 mm
Leikkaukset/min. 2700
Äänenpainetaso LpA ..... 73 dB (A)
Äänen tehotaso LWA ..... 93 dB (A)
Epävarmuus KpA / KWA ..... 3 dB
Äänitehotaso taattu LWA ..... 96 dB(A)
Tärinä ah..... . .....3,4 m/s2
Epävarmuus K 1,5 m/s2
Paino: .....4,0 kg

Tärkeää!

Laite toimitetaan ilman akkuja ja ilman laturia ja sitä saa käyttää vain tietyn mallin litiumioniakkujen kanssa! Käyttäjä vaatii melunsuojatoimenpiteitä, jos näin on. Melu mitattiin standardien EN ISO 11203 ja EN ISO 3744:2010 mukaisesti. Kahvan aiheuttaman tärinän arvo määritettiin standardin EN 60745-1 mukaisesti.

Tärkeää!
Tärinäarvo vaihtelee sähkölaitteen käyttöalueen mukaan ja voi poikkeuksellisissa olosuhteissa ylittää määritellyn arvon.

Käytä kuulosuojaimia.
Melun vaikutus voi vahingoittaa kuuloa.
Ilmoitetut tärinäpäästötasot ja ilmoitetut melupäästöarvot on mitattu standardisoitujen kriteerien mukaisesti, ja niitä voidaan käyttää sähkötyökalujen vertailuun.
Ilmoitettuja tärinäpäästötasoja ja ilmoitettuja melupäästöarvoja voidaan käyttää myös altistumisen alustavaan arviointiin.

Varoitus:
Tärinä- ja melupäästötasot voivat poiketa todellisen käytön aikana määritellystä tasosta riippuen sähkötyökalun käyttötavasta, erityisesti työkappaleen tyypistä, johon sitä käytetään.

Pidä melupäästöt ja tärinät mahdollisimman pieninä.
• Käytä vain moitteettomassa kunnossa olevia laitteita.
• Huolla ja puhdista laite säännöllisesti.
• Mukauta työtyylisi laitteeseen sopivaksi.
• Älä ylikuormita laitetta.
• Huollata laite aina tarvittaessa.
• Katkaise laitteesta virta, kun se ei ole käytössä.
• Käytä suojakäsineitä.

Huomio!
Jäännösriskit
Vaikka käyttäisit tätä sähkötyökalua ohjeiden mukaisesti, tiettyjä jäännösriskejä ei voida sulkea pois.

Seuraavat vaarat voivat ilmetä laitteen rakenteen ja sijoittelun yhteydessä:
1. Keuhkovaurio, jos sopivaa pölynaamaria ei käytetä.
2. Kuulovaurio, jos sopivaa kuulosuojainta ei käytetä.
3. Terveysvauriot, jotka aiheutuvat käsien ja käsien tärinästä, jos laitetta käytetään pitkään tai sitä ei ole ohjattu ja huollettu asianmukaisesti.

Rajoita käyttöaikaa!
Kaikki käyttöjakson vaiheet on otettava huomioon (esimerkiksi ajat, jolloin sähkötyökalut kytketään pois päältä ja ajat, jolloin työkalu on kytketty päälle, mutta toimii ilman kuormitusta).

5. Ennen käynnistämistä
Laite toimitetaan ilman akkuja ja ilman laturia.
Kasaus
Pensasleikkuri toimitetaan täysin koottuna.
Ainoa mitä tarvitsee vielä tehdä, on liu'uttaa keräin tarvittaessa leikkurikiskoon.

Pistosten kerääjän asennus (kuvat 4a-4c)
Vaakasuoraa leikkaamista varten suosittelemme pistokkaan kerääjän asentamista. Näin voit helposti poistaa pistokkaat. Pensasaidan pinta pysyy siis puhtaana (kuva 4a/4b). Aseta leikkuujätteen kerääjä (6) leikkurin kiskoon (kuva 4c). Työnnä sitten pistokkaiden kerääjää kahvaa kohti kiinnittääksesi sen tiukasti kiinnitystapin alle (kuva 4c/osa A).

Kääntyvä kahva
Pensasleikkuri on varustettu kääntyvällä

takakahvalla. Sitä voidaan kääntää 90° vasemmalle ja oikealle.
Vedä tätä varten luistia (kuva 5 / kohta 5) nuolen suuntaan ja kierrä kahvaa.
Palauta kahva alkuperäiseen asentoonsa vetämällä luistia (kuva 5 / kohta 5) taaksepäin nuolen suuntaan.
Kahva on käännettävä 90° kulmaan pystysuorassa leikkauksessa.

Huomaa: Lukkoa ei voi vetää, jos virtakytkintä (kuva 5/kohta 4a) painetaan.

VAROITUS!
Älä jätä kahvaa väliasentoon.

Akun asentaminen (Kuva. 6)
Paina akun paino-/lukituspainiketta kuvan 6 mukaisesti ja liu'uta akku paikoilleen. Varmista, että paino/lukkopainike lukittuu kunnolla.
Irrota akku noudattamalla ohjeita käänteisessä järjestyksessä.

Akun lataus (Kuva. 7)
1. Ota akku pois laitteesta. Tee tämä painamalla lukituspainiketta.
2. Tarkista, että verkkojännite vastaa akkulaturin arvokilvessä ilmoitettua jännitettä. Liitä laturin virtapistoke pistorasiaan. Vihreä LED alkaa sitten vilkkua.
3. Aseta akku laturiin.
4. Kohdassa "Laturin merkkivalo" on taulukko, jossa selitetään laturin LED-näyttö.
Akku voi lämmetä hieman latauksen aikana. Tämä on normaalia.
Jos akku ei lataudu, tarkista:
• onko pistorasiassa jännitettä;
• onko latausliittimissä hyvä kontakti.
Jos akku ei vieläkään lataudu, vaihda uuteen.
Varmistaaksesi, että akku toimii pitkään, lataa se aina uudelleen.
Sinun on ladattava akku, kun huomaat laitteen suorituskyvyn heikkenevän.
Älä koskaan anna akun tyhjentyä täysin. Tämä johtaa aikaa myöten elinkaaren lyhentymiseen.
Akun varauksen merkkivalo (Kuva. 8)
Paina akun varaustilan osoitinkytkintä (kohta A). Akun kapasiteetin ilmaisin (kohta B) näyttää akun lataustilan 4 LED-valolla.

Kaikki 4 LEDiä palavat:
Akku on ladattu täyteen.
3 tai 2 tai 1 LED palaa:
Akussa on riittävästi jäljellä varausta.
1 LED-lamppu:
Akku on tyhjä, lataa akku uudelleen.

Kaikki LEDit vilkkuvat:
Akun lämpötila on liian alhainen. Irrota akku laitteesta, pidä sitä huoneenlämmössä yhden vuorokauden ajan. Jos vika toistuu, se tarkoittaa, että ladattava akku on kulunut tyhjentynyt ja viallinen. Irrota akku laitteesta. Älä koskaan käytä tai lataa viallista akkua.

6. Käyttökytkin ON/OFF.
Pensasleikkuri on varustettu kaksikätisellä turvakytkimellä. Se toimii vain, kun yhtä kädensijan katkaisimista (kuva 9/kohta 3a) painetaan yhdellä kädellä ja kahvan kytkintä (kuva 5/kohta 4a) toisella kädellä.
Jos jompikumpi kytkin vapautetaan, leikkurit lakkaavat liikkumasta. Varo leikkureita, koska ne hidastavat pysähdystä.

Huomautuksia käyttöön

• Pensasleikkurilla voidaan leikata pensaita ja pensaita sekä pensaita.
• Saat parhaan leikkuutuloksen pitämällä pensasleikkuria niin, että leikkurin hampaat ovat n. 15° pensaaseen nähden (katso kuva 10).
• Kaksiteräiset leikkurit pyörivät vastakkaisiin suuntiin, mikä mahdollistaa leikkaamisen molempiin suuntiin (katso kuva 11).
• Varmistaaksesi, että leikkaat pensasaidan tasaiselle korkeudelle, suosittelemme käyttämään ohjausnauhaa tai vastaavaa pensasaitaa myöten. Leikkaa pois kaikki oksat, jotka työntyvät ohjauslinjan ulkopuolelle (katso kuva 12).

VAROITUS! Ole erityisen tarkkaavainen leikkaaessasi ohjauslinjaa pitkin. Älä leikkaa ohjauslinjan läpi. Tämä voi takertua teriin ja johtaa vammoihin tai omaisuusvahinkoihin.

• Leikkaa pensasaidat kaarevin liikkein alhaalta ylöspäin (katso kuva 13).

Mitä tehdä, jos terä on tukossa

1. Pysäytä laite.
2. Irrota akku.
3. Poista juuttunut materiaali terästä (käytä työkäsineitä loukkaantumisen välttämiseksi).

Käytön jälkeen

1. Sammuta laite.
2. Irrota akku.
3. Anna laitteen jäähtyä ja säilytä se sitten poissa lasten ulottuvilta.

7. Puhdistus, Huolto ja varaosat

Huomio!

Ennen kuin asetat pensasleikkurin pois ja puhdistat sen, sammuta se ja poista akku.

7.1 Puhdistus

• Pidä kaikki turvalaitteet, tuuletusaukot ja moottorin kotelo mahdollisimman puhtaana liasta ja pölystä. Pyyhi laite puhtaalla liinalla tai puhalla se paineilmalla alhaisella paineella.
• Suosittelemme, että puhdistat laitteen välittömästi aina, kun lopetat sen käytön.
• Puhdista laite säännöllisesti kostealla liinalla ja pehmeällä saippualla. Älä käytä puhdistusaineita tai liuottimia; ne voivat vahingoittaa laitteen muoviosia. Varmista, ettei vettä pääse tunkeutumaan laitteeseen. Veden pääsy sähkötyökaluun lisää sähköiskun vaaraa.
• Käytä harjaa poistaaksesi sakkaukset suojuksesta.

7.2 Huolto

• Leikkurit tulee puhdistaa ja voidella säännöllisin väliajoin parhaan suorituskyvyn varmistamiseksi aina. Poista saostumat harjalla ja levitä ohut öljykalvo (Kuva 14).
• Laitteen sisällä ei ole muita huoltoa vaativia osia.
• Kaksoisteriä ei saa käyttää, jos ne ovat vaurioituneet tai kuluneet, ja ne on vaihdettava valmistajan alkuperäisiin varaosiin.
• Pyydä asiantuntijaa tai huoltokorjaamoamme suorittamaan kaikki turvallisuuteen liittyvät huoltotyöt ja viallisten osien vaihdot tai kaksoisterän teroitus tai vaihto, jotta voit olla varma pensasleikkurin käyttöturvallisuudesta.

7.3 Varastointi

• Kun pensasleikkuri ei ole käytössä, se voidaan ripustaa naulaan, ruuviin tai vastaavaan säilytystä varten, kun leikkurikiskon suojus on asennettu (kuva 15/osa. A).

7.4 Varaosien tilaaminen:
Mainitse seuraavat tiedot varaosia tilattaessa:
• Konetyyppi
• Koneen tuotenumero
• Koneen tunnusnumero
• Tarvittavan osan varaosanumero

8. Kierrätys

Laite toimitetaan pakattuna, jotta se ei vaurioidu kuljetuksen aikana. Tämän pakkauksen raaka-aineet voidaan käyttää uudelleen tai kierrättää. Laitteet ja sen lisävarusteet on valmistettu erilaisista materiaaleista, kuten metallista ja muovista. Älä koskaan laita viallisia laitteita kotitalousjätteisiin. Laitteet tulee toimittaa sopivaan keräyskeskukseen asianmukaista hävittämistä varten. Jos et tiedä tällaisen keräyspisteen sijaintia, sinun tulee kysyä asiasta kuntasi toimistosta.

9. VIAT

Laite ei toimi:
Tarkista, että akku on ladattu ja että latausyksikkö toimii. Jos laite ei toimi, vaikka jännite on kunnossa, lähetä se asiakaspalveluun.



Älä koskaan laita sähkötyökaluja kotitalousjätteisiin.

Vanhoja sähkö- ja elektroniikkalaitteita koskevan EU-direktiivin 2012/19/EY ja sen kansalliseen lainsäädäntöön saattamisen noudattamiseksi vanhat sähkötyökalut on erotettava muusta jätteestä ja hävitettävä ympäristöystävällisellä tavalla, esim. viemällä kierrätyskeskukseen.


Kierrätysvaihtoehto palautuspyynnölle:
Vaihtoehtona laitteen palauttamiselle valmistajalle sähkölaitteen omistajan on huolehdittava, että laite hävitetään asianmukaisesti, jos hän ei halua enää pitää laitetta. Vanhat laitteet voidaan palauttaa sopivaan keräyspisteeseen, joka hävittää laitteet kansallisten kierrätys- ja jätehuoltomääräysten mukaisesti. Tämä ei koske lisävarusteita tai apuvälineitä, joissa ei ole vanhan laitteen mukana toimitettuja sähkökomponentteja.

Oikeus teknisiin muutoksiin pidätetään.

10. Laturin merkkivalo

Suomi Trading Oy
Realparkinkatu 12, 37570 Lempäälä
asiakaspalvelu@suomitrading.fi


TIMCO DUAL 2X18V Cordless hedge trimmer

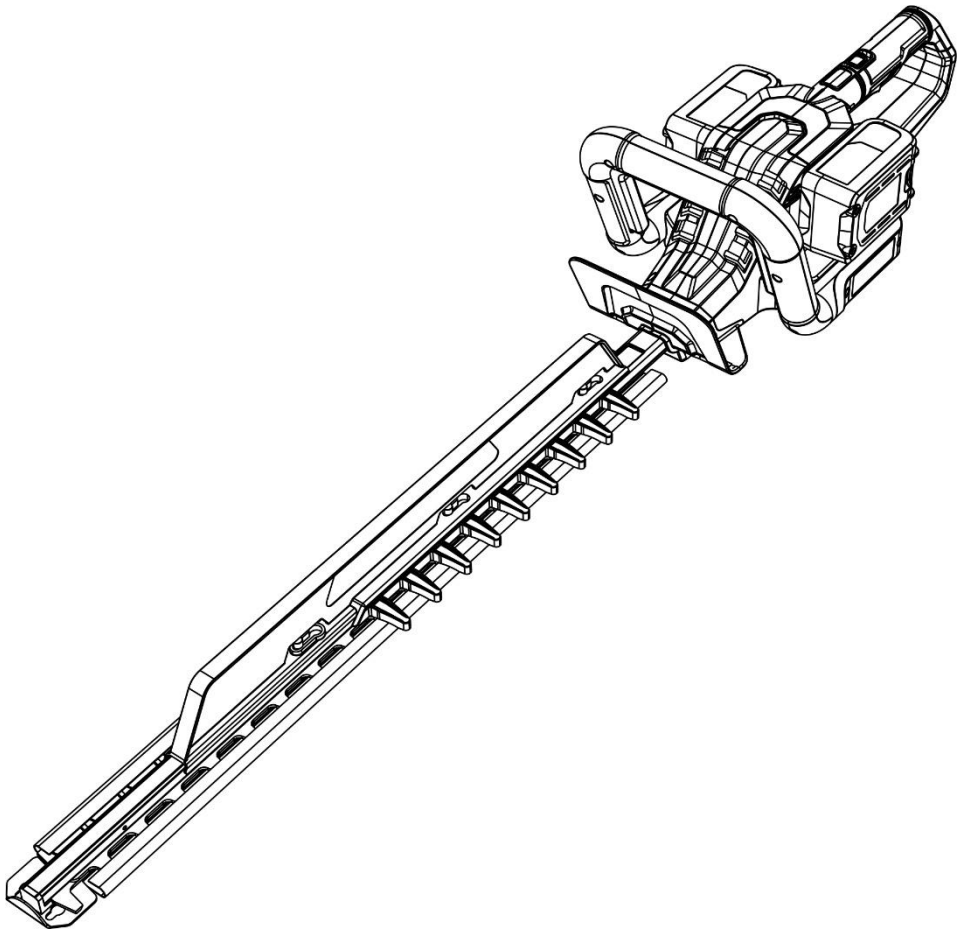


EAN: 6438014399140

Original operating instructions

1

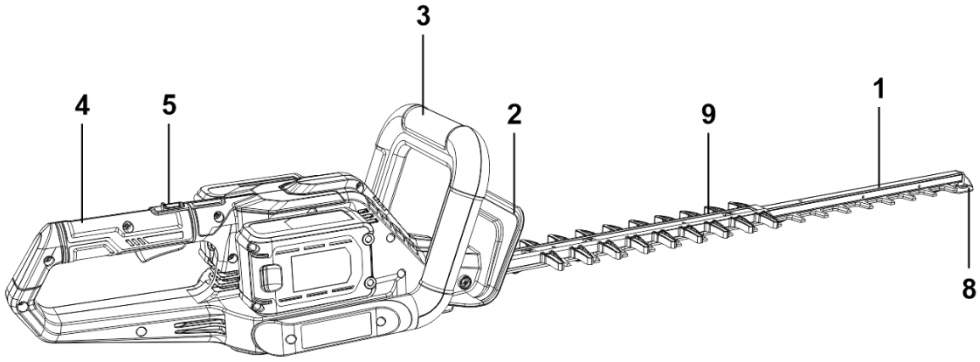


2

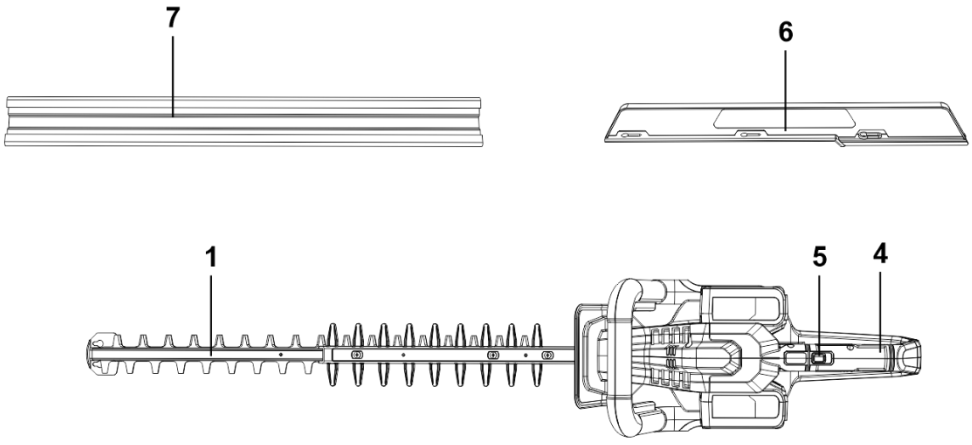


3




4a

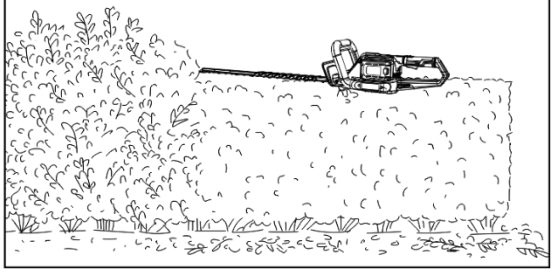


4b

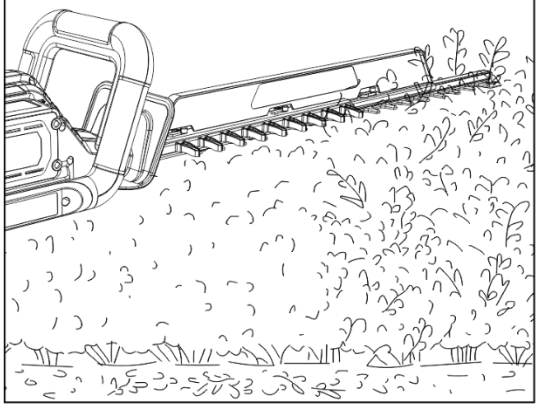


4c

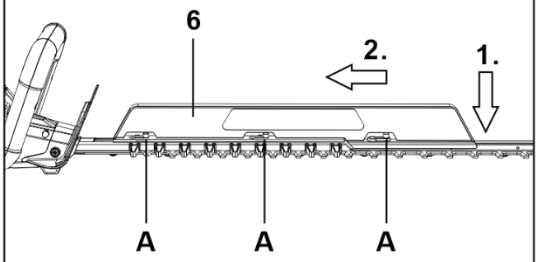


5

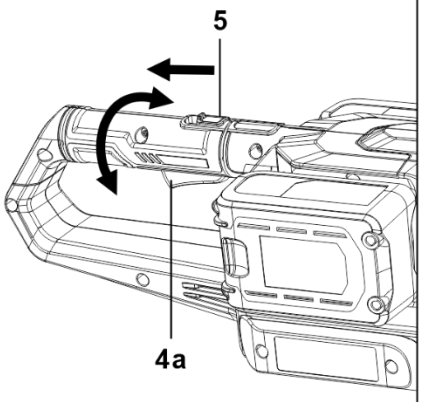


6

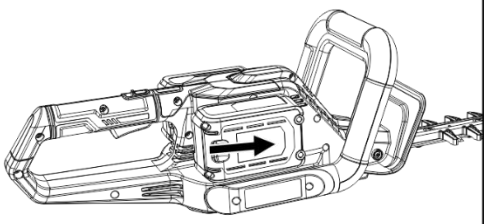


7

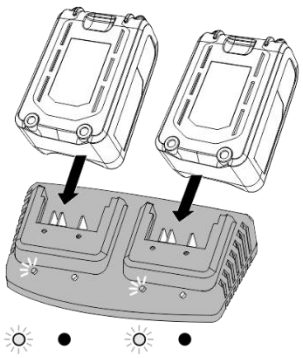


8

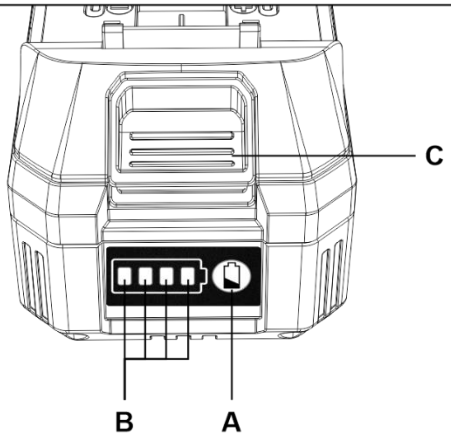


9

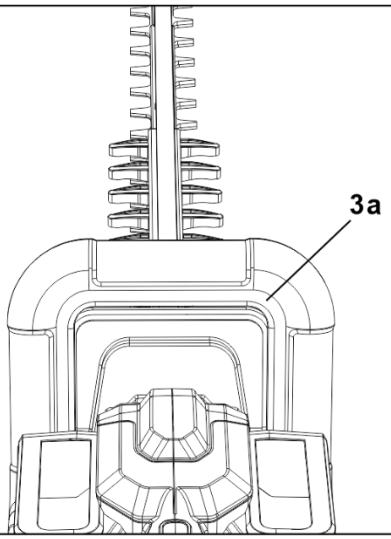


10

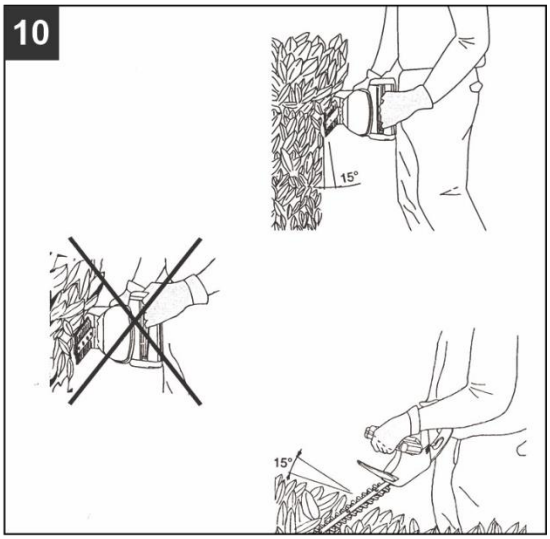


11

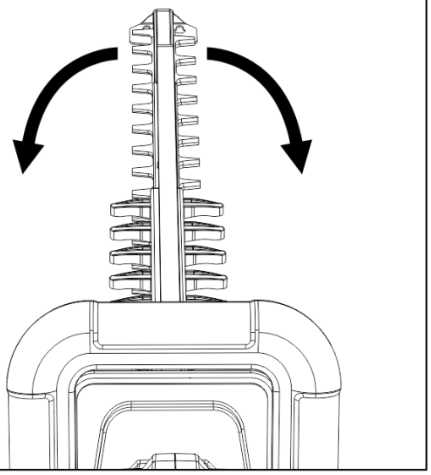


12

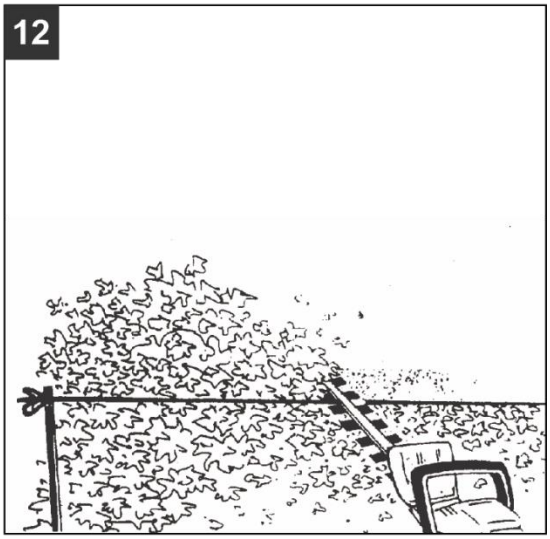


13

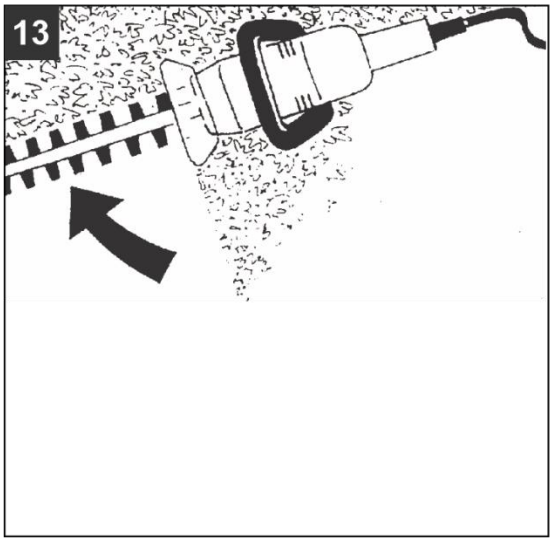

14

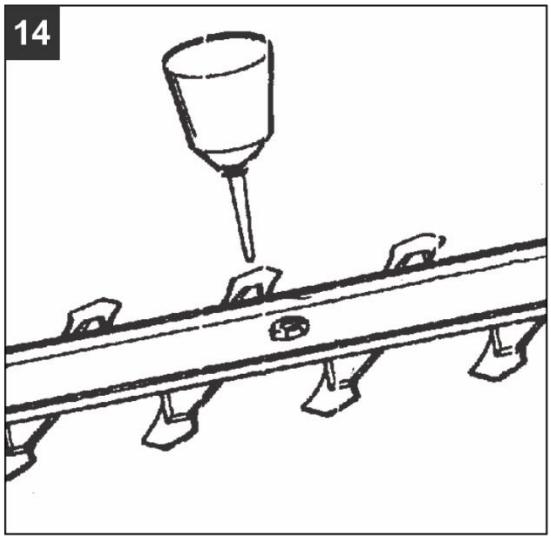


15

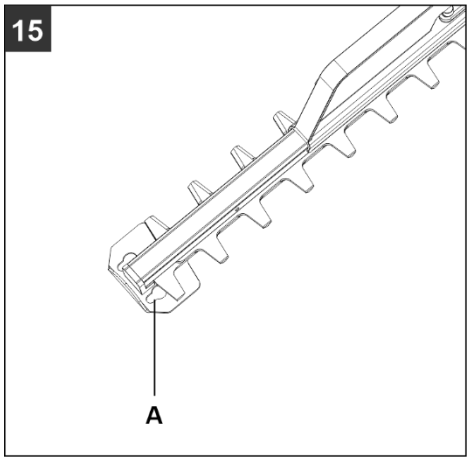





Danger! - Read the operating instructions to reduce the risk of injury

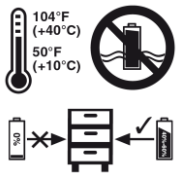

Store the batteries only in dry rooms with an ambient temperature of 50°F to 104°F (+10°C to +40°C).
Place only fully charged batteries in storage (charged at least 40%).

Children are not allowed to use this equipment. Children should be supervised so that they do not play with the equipment. Children are not allowed to carry out cleaning or maintenance. This equipment is not allowed to be used by people with limited physical, sensory or mental capacities or by those with insuffi cient knowledge or experience unless they are supervised or instructed by a person who is responsible for them.

Danger!
When using the equipment, a few safety precautions must be observed to avoid injuries and damage. Please read the complete operating instructions and safety regulations with due care.
Keep this manual in a safe place, so that the information is available at all times. If you give the equipment to any other person, hand over these operating instructions and safety regulations as well. We cannot accept any liability for damage or accidents which arise due to a failure to follow these instructions and the safety instructions.

Explanation of the symbols used (see Fig. 3)
1. Warning
2. Protect against moisture.
3. Read the instruction manual before starting.
4. Wear eye protection and ear plugs.

11. Safety information

Danger!
Read all safety regulations and instructions.

WARNING: When using electric gardening appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following:

FOR ALL APPLIANCES
• Avoid dangerous environments - do not use appliances in damp or wet locations.
• Don’t use in rain.
• Keep children away - all people and pets should be kept at a distance from the work area.
• Dress properly - do not wear loose clothing or jewelry. They can be caught in moving parts. Wear protective clothing; use of work gloves, long pants, a long sleeved shirt and safety footwear is recommended when working outdoors. Wear protective hair covering to contain long hair.
• Use safety glasses - always use face

or dust mask if the area in which you are working is dusty. The purpose of the safety rules is to attract your attention to possible dangers. The safety symbols and the explanations with them, require your careful attention and understanding. The safety warnings do not by themselves eliminate any danger. The instruction or warnings they give are not substitutes for proper accident prevention measures.

• Use right appliance - do not use appliance for any job except that for which it is intended.

• Do not force appliance - it will do the job better and with less likelihood of a risk of injury at the rate for which it was designed.

• Do not overreach - keep proper footing and balance at all times.

• Stay alert. Use common sense. Do not operate appliance when you are tired or under the influence of drugs, alcohol or medication.

• When not in use, appliances should be stored indoors in dry places out of reach of children.

• Maintain appliance with care. Follow instructions for lubricating and changing accessories. Keep handles dry, clean, and free from oil and grease.

• Check damaged parts. Before using the appliance, make sure the safety guards are intact. Never use a tool without its safety guard. Check the alignment of the moving parts, the binding of the moving parts.

• Check for broken or defective parts that can affect the safe operation of your tool. A guard or other part that is damaged should be properly repaired or replaced by an authorized service centre unless indicated elsewhere in this manual.

• Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

• Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

• When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

• Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns. (This advice is considered correct for conventional NiMh, NiCd, lead acid and lithium-ion cell types. If this advice is incorrect for a cell design that differs from these, then the correct advice may be substituted.)

• Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

• Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.

• Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is

maintained.
• Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.

1.) FOR ALL BATTERY-OPERATED GARDENING APPLIANCES:
• Do not charge appliance in rain, or in wet locations.
• Do not use battery-operated appliances in the rain. Always remove or disconnect battery pack before adjusting, cleaning, servicing or transporting the garden appliances.

2.) FOR ALL BATTERY-OPERATED PRODUCTS EMPLOYING A DETACHABLE OR SEPARABLE BATTERY:
• Use only the specifically designated battery packs.
• Do not dispose of the battery in a fire. The cell may explode. Check with local codes for possible special disposal instructions.
• Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
• Exercise care in handling the battery in order not to short it with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.

3.) AVOID UNINTENTIONAL STARTING – DO NOT INSERT BATTERY WHILE YOUR FINGER IS ON THE SWITCH. BE SURE SWITCH IS OFF WHEN INSERTING THE BATTERY.

GENERAL SAFETY WARNINGS FOR THE BATTERY PACK
• Dispose of used battery promptly and properly. When disposing of secondary cells or batteries, keep cells or batteries of different electrochemical systems separate from each other.
• Keep battery out of reach of children and in original package until ready to use.
• Never put batteries in one's mouth. If swallowed, contact local poison control centre immediately.
• CAUTION – The battery used in this device may present a risk of fire or chemical burn if mishandled. Use of another battery may present a risk of fire or explosion.
• WARNING: Do not use a visibly damaged battery pack or appliance.
• WARNING: Do not modify or attempt to repair the appliance or the battery pack.
• BATTERIES MUST BE RECYCLED.
• Do not short-circuit a cell or battery. Do not store cells or batteries haphazardly in a box or drawer where they may shortcircuit each other or be short-circuited by conductive materials.
• Do not subject cells or batteries to mechanical shocks.
• Keep cells and batteries clean and dry. Wipe the cell or battery terminals with a clean dry cloth if they become dirty.
• Do not maintain secondary cells and batteries on charge when not in use.
• Retain the original cell and battery. Do not use any charger other than that specifically provided for use with the equipment. Secondary cells and batteries need to be charged before use. Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.

• When possible, remove the battery from the equipment when not in use.
• Prevent unintentional starting. Ensure the switch is in the off-position before connecting to the battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliances that have the switch on invites accidents.
• Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
• Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
• Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

IMPORTANT SAFETY INSTRUCTIONS FOR CHARGER

WARNING: This product may contain lead, phthalate or other chemicals known to the State of California to cause cancer, birth defects and other reproductive harm. Please wash your hands after use.

• Always inspect the equipment visually before using it. Do not use the equipment if safety devices are damaged or worn. Never disable any safety devices.
• Stop using the equipment when there are people – particularly children – or pets nearby.
• You are responsible for safety in the operating area.
• Make sure you stand squarely at all times while working.
• Never leave the equipment unsupervised in the work area. If you stop work for a while, leave the equipment in a safe place.
• If you stop your work in order to go to another area to work, you must make sure that the equipment is switched off while you are going there.
• Never use the equipment while it is raining or in damp or wet surroundings.
• Protect your equipment against moisture and rain.
• When working with fertilizers and dusty products, wear suitable eye and breathing protection. Protect your skin and eyes from dust.
• Do not use the equipment for distributing liquids, powder, pesticides, herbicides or chemicals intended for conventional, commercial or industrial use.
• Prior to working with the spreader material, read the instructions on the relevant fertilizer or seed packaging and be sure to follow these instructions.
• When the equipment is in operation, you must always hold it away from your body!
• Do not switch on the equipment when it is turned around or when it is not in working position.
• Never point the equipment directly at yourself or at any other person.
• When you are not using the equipment, keep it in a dry place out of the reach of children.
• Do not use the spreader material compartment to store unneeded spreader material.

• Clean the spreader material compartment before filling.
• Make sure that the ON/OFF switch is not activated before you remove any blockages, clean the equipment, perform any maintenance or place the equipment in storage.
• Never remove blockages with your fingers -use a stick or a similar tool.
• Be careful not to touch the moving parts of the equipment.

Keep all safety regulations and instructions in a safe place for future use.

12. Layout and items supplied

2.1 Layout (Fig. 1/2)

1. Cutter rail
2. Hand guard
3. Steady grip with button switches
4. Handle with On/Off switch
5. Lock for handle
6. Cuttings collector
7. Cutter guard
8. Impact guard
9. Cutting blade safety cover

2.2 Items supplied

Please check that the article is complete as specified in the scope of delivery. If parts are missing, please contact our service center or the sales outlet where you made your purchase at the latest within 5 working days after purchasing the product and upon presentation of a valid bill of purchase. Also, refer to the warranty table in the service information at the end of the operating instructions.
• Open the packaging and take out the equipment with care.
• Remove the packaging material and any packaging and/or transportation braces (if available).
• Check to see if all items are supplied.
• Inspect the equipment and accessories for transport damage.
• If possible, please keep the packaging until the end of the guarantee period.

Danger!
The equipment and packaging material are not toys. Do not let children play with plastic bags, foils or small parts. There is a danger of swallowing or suffocating!

- Hedge trimmer
- Cutter guard
- Cuttings collector
- Original operating instructions

13. Proper use

This hedge trimmer is suitable for cutting hedges, bushes and shrubs.
The equipment is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.
Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

14. Technical data

Rated voltage .....36 V d.c.
Cutter rail length ..... 720 mm
Cutting length ..... 650 mm
Tooth spacing ..... 30 mm
Cuts/min. 2700
Sound pressure level LpA ..... 73 dB (A)
Sound power level LWA ..... 93 dB (A)
Uncertainty KpA / KWA ..... 3 dB

Sound power level guaranteed
LWA ..... 96 dB(A)
Vibrations ah..... . .....3.4 m/s2
Uncertainty K 1.5 m/s2
Weight: .....4.0 kg

Important!
The equipment is supplied without batteries and without a charger and is allowed to be used only with the lithium-ion batteries of the specific model!
The operator will require noise protection measures if this is the case.
The noise was measured in accordance with EN ISO 11203 and EN ISO 3744:2010. The value of the vibrations emitted by the handle was determined in accordance with EN 60745-1.

Important!
The vibration value changes according to the area of application of the electric equipment and may exceed the specified value in exceptional circumstances.

Wear ear-muffs.
The impact of noise can cause damage to hearing.
The stated vibration emission levels and stated noise emission values were measured in accordance with a set of standardized criteria and can be used to compare one power tool with another.
The stated vibration emission levels and stated noise emission values can also be used to make an initial assessment of exposure.

Warning:
The vibration and noise emission levels may vary from the level specified during actual use, depending on the way in which the power tool is used, especially the type of workpiece it is used for.

Keep the noise emissions and vibrations to aminimum.
• Only use appliances which are in perfect working order.
• Service and clean the appliance regularly.
• Adapt your working style to suit the appliance.
• Do not overload the appliance.
• Have the appliance serviced whenever necessary.
• Switch the appliance off when it is not in use.
• Wear protective gloves.

Caution!
Residual risks
Even if you use this electric power tool in accordance with instructions, certain residual risks cannot be rules out. The following hazards may arise in connection with the equipment's construction and layout:
1. Lung damage if no suitable protective dust mask is used.
2. Damage to hearing if no suitable ear protection is used.
3. Health damage caused by hand-arm vibrations if the equipment is used over a prolonged period or is not properly guided and maintained.

Limit the operating time!
All stages of the operating cycle must be considered (for example, times in which the electric tools are switched off and times in which the tool is switched on but operates without load).

15. Before starting the equipment
The equipment is supplied without batteries and without a charger.

Assembly
The hedge trimmer is supplied fully assembled.
All that still needs doing is to slide the cuttings collector onto the cutter rail if required.

Fitting the cuttings collector (Fig. 4a-4c)
For horizontal cutting we recommend that you install the cuttings collector. This enables you to remove the cuttings easily. The surface of the hedge thus remains clear (Fig. 4a/4b). Position the cuttings collector (6) on the cutter rail (Figure 4c). Then push the cuttings collector towards the handle to clamps it securely under the retaining pin (Fig. 4c/Item A).

Rotatable handle
The hedge trimmer is fitted with a rotatable rear handle. It can be rotated 90° to the left and right.
To do this, pull the slide (Fig. 5 / item 5) in the direction of the arrow and rotate the handle.
To return the handle to its original position, pull the slide (Fig. 5 / item 5) back in the direction of the arrow. The handle should be rotated through 90° when performing vertical cuts.

Note: The lock cannot be pulled back if the On/Off switch (Fig. 5/Item 4a) is pressed.
WARNING!
Never attempt to move the handle to a position in between.

Installing the battery (Fig. 6)
Press the push/lock button of the battery pack as shown in Fig. 6 and slide the battery pack into the mount provided. Make sure that the push/lock button engages properly. To remove the battery pack, follow the steps in reverse order.

Charging the battery (Fig. 7)
1. Take the battery pack out of the equipment. Press the push/lock button to do this.
2. Check that your mains voltage matches the voltage specified on the rating plate of the battery charger. Insert the power plug of the charger into the socket outlet. The green LED will then begin to flash.
3. Insert the battery pack into the charger.
4. In the section entitled “Charger indicator” there is a table with an explanation of the LED display on the charger.
The battery pack can heat up slightly during charging. This is normal.

If the battery pack fails to charge, please check:
- whether there is a voltage at the mains power socket;
- whether there is good contact at the charging contacts.

If the battery pack still fails to charge, please send
- the charging unit
- and the battery pack to our customer service center.

To ensure that the battery pack provides long service, you should take care to recharge it promptly.
You must recharge the battery pack when you notice that the performance of the device drops.
Never allow the battery pack to become fully discharged. This will cause it to develop a defect.

Battery capacity indicator (Fig. 8)
Press the battery capacity indicator switch (item A). The battery capacity indicator (item B) shows the charge status of the battery using 4 LEDs.

All 4 LEDs are lit:
The battery is fully charged.
3 or 2 or 1 LED(s) are lit:
The battery has an adequate remaining charge.
1 LED fl shes:
The battery is empty, recharge the battery.
All LEDs blink:
The battery temperature is too low. Remove the battery from the equipment, keep it at room temperature for one day. If the fault reoccurs, this means that the rechargeable battery has undergone exhaustive discharge and is defective. Remove the battery from the equipment. Never use or charge a defective battery.

16. Operation
Switching ON/OFF.
The hedge trimmer is equipped with a twohanded safety switch. It works only when one of the switches on the steady grip (Fig. 9/Item 3a) is pressed with one hand and the switch (Fig. 5/Item 4a) on the handle is pressed with the other hand.
If either switch is released, the cutters will stop moving. Please watch out for the cutters as they slow down to a standstill.

Notes for use
• A hedge trimmer can be used to cut shrubs and bushes as well as hedges.
• To obtain the best cutting results, hold the hedge trimmer so that the cutter teeth are at an angle of approx. 15° in relation to the hedge (see Fig. 10).
• The twin-bladed cutters rotate in opposite directions, thus enabling cutting in both directions (see Fig. 11).
• To ensure that you cut the hedge to a level height, we recommend tying a guide line of string or similar along the hedge. Cut off all branches that protrude beyond the guide line (see Fig. 12).

Warning! Be particularly attentive when cutting along the guide line. Do not cut through the guide line. This could get entangled in the blades and lead to injuries or damage to property.
• Cut the sides of the hedge with curve-shaped movements from the bottom up (see Figure 13).

What to do if the blade gets blocked
1. Stop the equipment.
2. Remove the battery.
3. Remove the jammed material from the blade (wear work gloves to prevent injury when you do so).
After using
1. Switch off the equipment.
2. Remove the battery.
3. Allow the equipment to cool down and then store it out of children’s reach.

17. Cleaning, maintenance and ordering of spare parts
Hazard!
Before putting the hedge trimmer away and cleaning it, switch it off and remove the battery pack.

7.1 Cleaning
• Keep all safety devices, air vents and the motor housing free of dirt and dust as far as possible. Wipe the equipment with a clean cloth or blow it with compressed air at low pressure.

• We recommend that you clean the device immediately each time you have finished using it.
• Clean the equipment regularly with a moist cloth and some soft soap. Do not use cleaning agents or solvents; these could attack the plastic parts of the equipment. Ensure that no water can seep into the device. The ingress of water into an electric tool increases the risk of an electric shock.
• Use a brush to remove deposits from the safety guard.

7.2 Maintenance
• The cutters should be cleaned and lubricated at regular intervals in order to ensure best performance at all times. Remove deposits with a brush and apply a thin film of oil (Figure 14).
• There are no other parts inside the equipment which require maintenance.
• Double blades are not allowed to be used if they are damaged or worn and must be replaced by original spare parts from the manufacturer.
• Arrange for an expert or our service workshop to carry out all safety-related maintenance work and the replacement of defective parts or the sharpening or replacement of the double blade, so that you can be sure that the hedge trimmer is safe to use.

7.3 Storage
• When not in use the hedge trimmer can be hung on a nail, screw or the like for storage, with the cutter rail guard fitted (Fig. 15/Item. A).

7.4 Ordering replacement parts:
Please quote the following data when ordering replacement parts:
• Type of machine
• Article number of the machine
• Identification number of the machine
• Replacement part number of the part required

18. Disposal and recycling
The equipment is supplied in packaging to prevent it from being damaged in transit. The raw materials in this packaging can be reused or recycled. The equipment and its accessories are made of various types of material, such as metal and plastic. Never place defective equipment in your household refuse. The equipment should be taken to a suitable collection center for proper disposal. If you do not know the whereabouts of such a collection point, you should ask in your local council offices.

19. Faults
The equipment does not work:
Check that the battery is charged and whether the charging unit is working. If the equipment will not work in spite of the voltage supply being OK, please send it to the customer service address below.



For EU countries only
Never place any electric power tools in your household refuse.



To comply with European Directive 2012/19/EC concerning old electric and electronic equipment and its implementation in national laws, old electric power tools have to be separated from other waste and disposed of in an environment-friendly fashion, e.g. by taking to a recycling

depot.

Recycling alternative to the return request:
As an alternative to returning the equipment to the manufacturer, the owner of the electrical equipment must make sure that the equipment is properly disposed of if he no longer wants to keep the equipment. The old equipment can be returned to a suitable collection point that will dispose of the equipment in accordance with the national recycling and waste disposal regulations. This does not apply to any accessories or aids without electrical components supplied with the old equipment.

Subject to technical changes.

20. Charger indicator

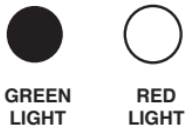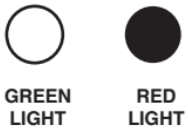BATTERY PACK	GREEN LED	RED LED	ACTION
			
Without battery pack	ON - SOLID	OFF	Ready to charge the battery pack.
With battery pack	ON - SOLID	OFF	Remove battery. **NOTICE:** If fuel gauge on battery is not full then the battery is too hot to charge, let battery cool for 30 min and charge again.
			
With battery pack	OFF	ON - SOLID	Battery is charging.

SUOMITRADING
Suomi Trading Oy
Realparkinkatu 12, 37570 Lempäälä
asiakaspalvelu@suomitrading.fi